


1. NAVIGATION SETTINGS

Points or areas on the map can be registered.

The registered points can be used on the “Destination” screen. (See “DESTINATION SEARCH BY HOME” on page 63, and “DESTINATION SEARCH BY “Address Book”” on page 75.)

Registered areas to avoid, will be avoided when the system searches for a route.


1 Press the “SETUP” button.

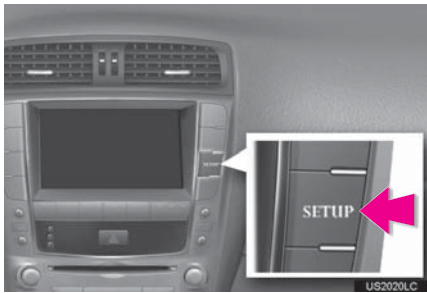

2 Touch “Navigation”.



3 Touch the desired items to be set.

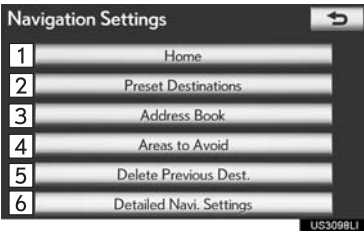


● On this screen, the following operations can be performed:

No.	Function	Page
1	Touch to set home.	103
2	Touch to set preset destinations.	105
3	Touch to set the address book.	107
4	Touch to set areas to avoid.	112
5	Touch to delete previous destinations.	116
6	Touch to set detailed navigation settings.	117

SETTING UP THE “Home”

If home has been registered, that information can be recalled by touching “Go Home” on the “Destination” screen. (See “DESTINATION SEARCH BY HOME” on page 63.)

- 1 Press the “SETUP” button.
- 2 Touch “Navigation” on the “Setup” screen.
- 3 Touch “Home”.

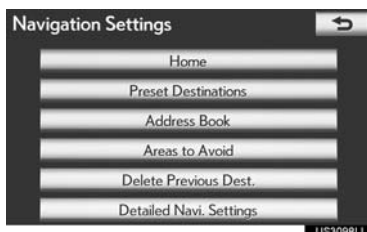

- 4 Touch the desired screen button.




REGISTERING HOME

- 1 Press the “SETUP” button.
- 2 Touch “Navigation” on the “Setup” screen.
- 3 Touch “Home” on the “Navigation Settings” screen.
- 4 Touch “Set Home”.



- 5 Touch the desired screen button and enter the location in the same way as for a destination search. (See “DESTINATION SEARCH” on page 62.)

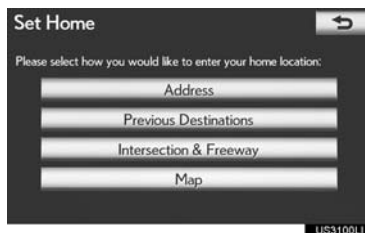

- When registration of home is completed, the “Edit Home” screen will be displayed.

- 6 Touch “OK”.

- To edit registered information, see “EDITING HOME” on page 104.


No.	Function	Page
1	Registering home	103
2	Editing home	104
3	Deleting home	104

EDITING HOME

- 1 Press the “SETUP” button.
- 2 Touch “Navigation” on the “Setup” screen.
- 3 Touch “Home” on the “Navigation Settings” screen.
- 4 Touch “Edit”.



- 5 Touch “Edit” next to the item to be edited.

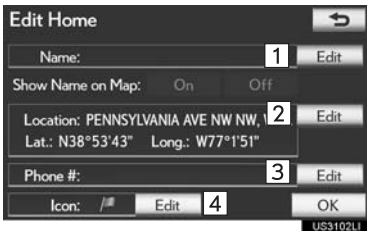

No.	Function	Page
1	Touch to edit the home name. The name can be displayed on the map.	110
2	Touch to edit location information.	110
3	Touch to edit the phone number.	111
4	Touch to change the icon to be displayed on the map.	109

“Show Name on Map”: The name of a home can be set to be displayed on the map by touching “On” or “Off”. (See page 110.)

- 6 Touch “OK”.

DELETING HOME

- 1 Press the “SETUP” button.
- 2 Touch “Navigation” on the “Setup” screen.
- 3 Touch “Home” on the “Navigation Settings” screen.
- 4 Touch “Delete”.




- 5 Touch “Yes” to delete home and touch “No” to cancel the deletion.


SETTING UP THE “Preset Destinations”

If preset destination has been registered, that information can be recalled by using “**Preset Destinations**” on the “Navigation Settings” screen. (See “**DESTINATION SEARCH BY PRESET DESTINATIONS**” on page 63.)

- 1 Press the “**SETUP**” button.
- 2 Touch “**Navigation**” on the “Setup” screen.
- 3 Touch “**Preset Destinations**”.

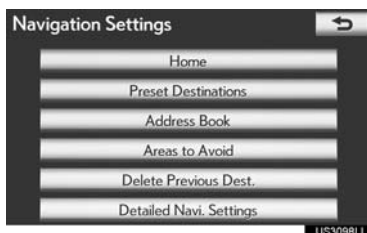


- 4 Touch the desired screen button.

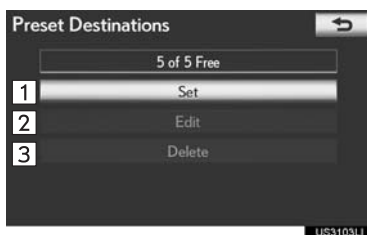

REGISTERING PRESET DESTINATIONS

- 1 Press the “**SETUP**” button.
- 2 Touch “**Navigation**” on the “Setup” screen.
- 3 Touch “**Preset Destinations**” on the “Navigation Settings” screen.
- 4 Touch “**Set**”.

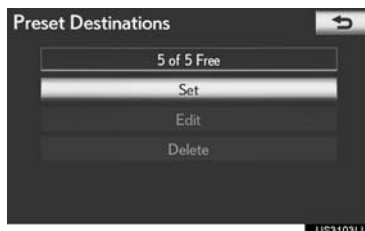

- 5 Touch the desired screen button and enter the location in the same way as for a destination search. (See “**DESTINATION SEARCH**” on page 62.)




3

NAVIGATION SYSTEM

No.	Function	Page
1	Registering a preset destination	105
2	Editing a preset destination	106
3	Deleting a preset destination	107

- 6 Touch a position for this preset destination.

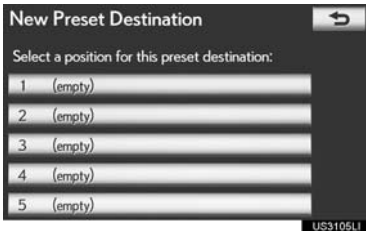

- When registration of a preset destination is completed, the “Edit Preset Destination” screen will be displayed.

- 7 Touch “OK”.

- To edit registered information, see “EDITING PRESET DESTINATIONS” on page 106.

EDITING PRESET DESTINATIONS


- Press the “SETUP” button.
- Touch “Navigation” on the “Setup” screen.
- Touch “Preset Destinations” on the “Navigation Settings” screen.
- Touch “Edit”.



- 5 Touch the screen button of the desired preset destination.



- 6 Touch “Edit” next to the item to be edited.

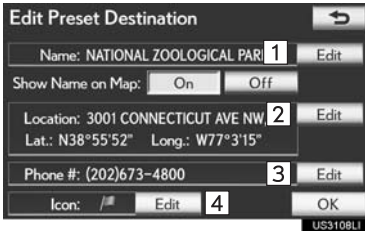

No.	Function	Page
1	Touch to edit the preset destination name. The name can be displayed on the map.	110
2	Touch to edit location information.	110
3	Touch to edit the phone number.	111
4	Touch to change the icon to be displayed on the map.	109

“Show Name on Map”: The name of a preset destination can be set to be displayed on the map by touching “On” or “Off”. (See page 110.)

- 7 Touch “OK”.

DELETING PRESET DESTINATIONS

- 1 Press the **"SETUP"** button.
- 2 Touch **"Navigation"** on the "Setup" screen.
- 3 Touch **"Preset Destinations"** on the "Navigation Settings" screen.
- 4 Touch **"Delete"**.




- 5 Touch the preset destination to be deleted.




SETTING UP THE "Address Book"

Points or areas on the map can be registered.

- 1 Press the **"SETUP"** button.
- 2 Touch **"Navigation"** on the "Setup" screen.
- 3 Touch **"Address Book"**.

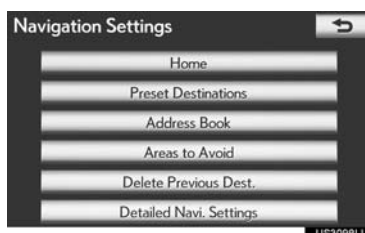

- 4 Touch the desired screen button.

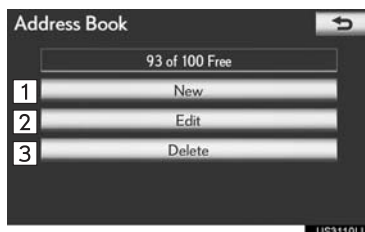

3

NAVIGATION SYSTEM


Screen button	Function
"Select All"	Touch to select all preset destinations.
"Unselect All"	Touch to cancel the "Select All" function.

- 6 Touch **"Delete"**.
- 7 Touch **"Yes"** to delete the preset destination and touch **"No"** to cancel the deletion.


No.	Function	Page
1	Registering address book entries	108
2	Editing address book entries	108
3	Deleting address book entries	111

REGISTERING ADDRESS BOOK ENTRIES

- 1 Press the **"SETUP"** button.
- 2 Touch **"Navigation"** on the "Setup" screen.
- 3 Touch **"Address Book"** on the "Navigation Settings" screen.
- 4 Touch **"New"**.

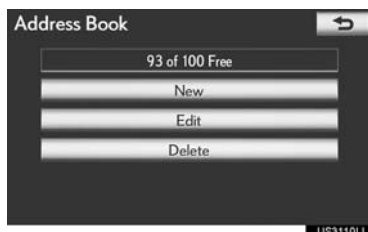

- 5 Touch the desired screen button and enter the location in the same way as for a destination search. (See "DESTINATION SEARCH" on page 62.)

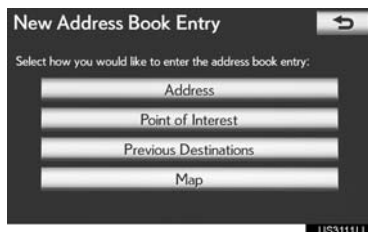

- After the address book entry has been registered, the "Edit Address Book Entry" screen will be displayed.

- 6 Touch **"OK"**.

- To edit registered information, see "EDITING ADDRESS BOOK ENTRIES" on page 108.


INFORMATION

- Up to 100 address book entries can be registered.


EDITING ADDRESS BOOK ENTRIES

The icon, name, location and/or phone number of a registered address book entry can be edited.


- 1 Press the **"SETUP"** button.
- 2 Touch **"Navigation"** on the "Setup" screen.
- 3 Touch **"Address Book"** on the "Navigation Settings" screen.
- 4 Touch **"Edit"**.

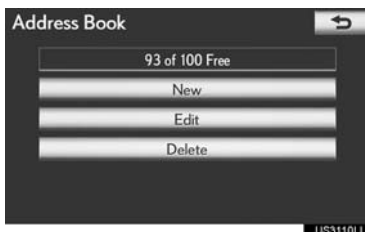

- 5 Touch the screen button of the desired address book entry.

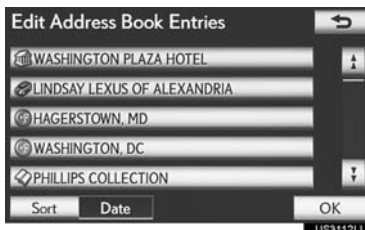

- 6 Touch **"Edit"** next to the item to be edited.

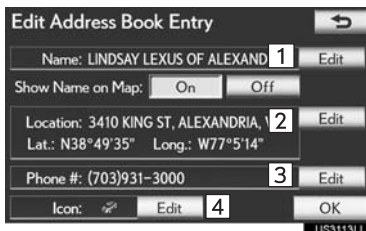


No.	Function	Page
1	Touch to edit the address book entry name. The name can be displayed on the map.	110
2	Touch to edit location information.	110
3	Touch to edit the phone number.	111
4	Touch to change the icon to be displayed on the map.	109

"Show Name on Map": The name of an address book entry can be set to be displayed on the map by touching **"On"** or **"Off"**. (See page 110.)


- 7 Touch **"OK"**.

■ TO CHANGE "Icon"

- 1 Touch **"Edit"**.

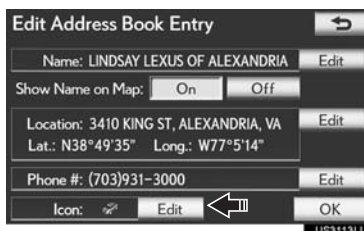

- 2 Touch the desired icon.

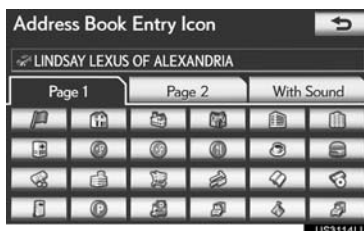


- Change pages by touching the **"Page 1"**, **"Page 2"** or **"With Sound"** tab.



■ SOUND ICONS

A sound for some address book entries can be set. When the vehicle approaches the location of the address book entry, the selected sound will be heard.

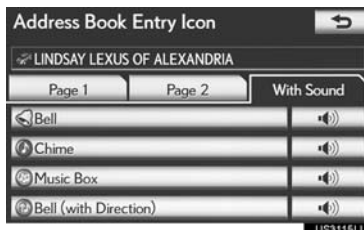- Touch the **"With Sound"** tab on the **"Address Book Entry Icon"** screen.
- Touch the desired sound icon.



- The next screen appears when **"Bell (with Direction)"** is touched.

- Touch either  or  to adjust the direction. Then touch "OK".




INFORMATION


- The bell sounds only when the vehicle approaches this point in the direction that has been set.

TO CHANGE "Name"

- Touch "Edit".

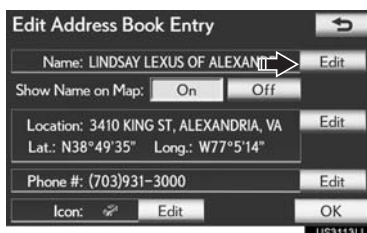

- Enter the name using the alphanumeric keys.

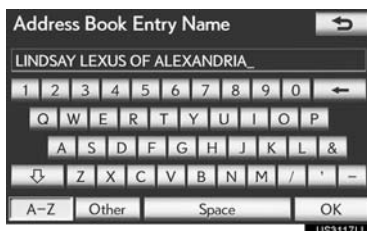


- Up to 70 characters can be entered.

- Touch "OK".

- The previous screen will be displayed.


DISPLAYING ADDRESS BOOK ENTRY NAMES


- Touch "On" to display the name on the map and touch "Off" to not display it.

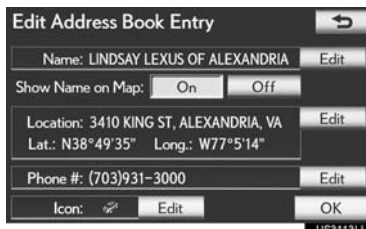

TO CHANGE "Location"

- Touch "Edit".

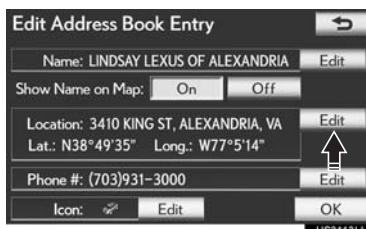

- Touch one of the 8 directional screen buttons to move the cursor  to the desired point on the map.




- Touch "OK".


- The previous screen will be displayed.

■ TO CHANGE “Phone #” (PHONE NUMBER)

1 Touch “Edit”.

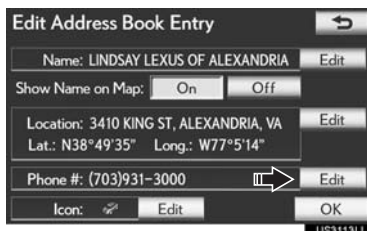

2 Enter the number using the number keys.

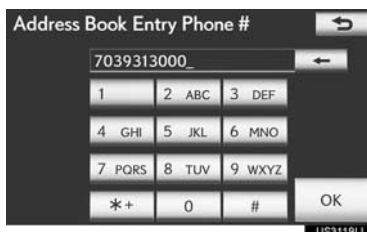

3 Touch “OK”.

- The previous screen will be displayed.


DELETING ADDRESS BOOK ENTRIES

1 Press the “SETUP” button.


2 Touch “Navigation” on the “Setup” screen.

3 Touch “Address Book” on the “Navigation Settings” screen.

4 Touch “Delete”.

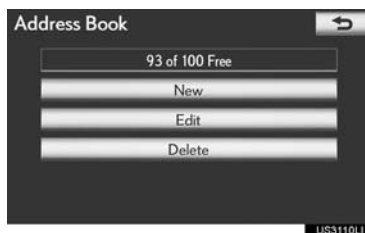

5 Touch the address to be deleted.

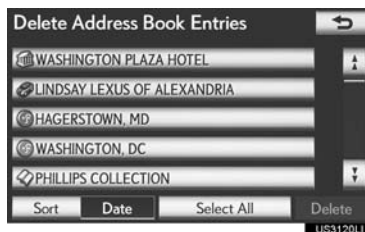

Screen button	Function
“Select All”	Touch to select all registered addresses.
“Unselect All”	Select to cancel the “Select All” function.


6 Touch “Delete”.

7 Touch “Yes” to delete the address book entries and touch “No” to cancel the deletion.


SETTING UP THE “Areas to Avoid”

Areas to be avoided because of traffic jams, construction work or other reasons can be registered as areas to avoid.

- 1 Press the “SETUP” button.
- 2 Touch “Navigation” on the “Setup” screen.
- 3 Touch “Areas to Avoid”.

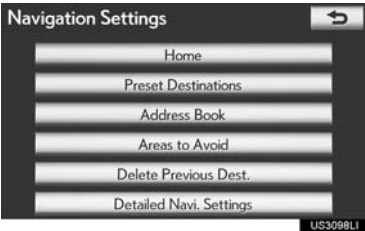


- 4 Touch the desired screen button.

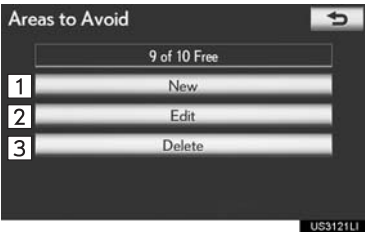


No.	Function	Page
1	Registering areas to avoid	112
2	Editing areas to avoid	113
3	Deleting areas to avoid	116

REGISTERING AREAS TO AVOID

- 1 Press the “SETUP” button.
- 2 Touch “Navigation” on the “Setup” screen.
- 3 Touch “Areas to Avoid” on the “Navigation Settings” screen.
- 4 Touch “New”.

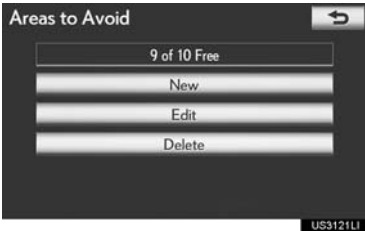

- 5 Touch the desired screen button and enter the location in the same way as for a destination search, or display the map of the area to be avoided. (See “DESTINATION SEARCH” on page 62.)

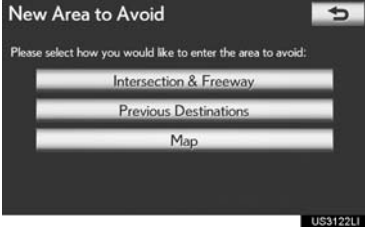



- 6 Scroll the map to the desired point.



“Adjust Location”: Touch to adjust the position in smaller increments.

- 7 Touch **“Enter”**.

- 8 Touch either  or  to change the size of the area to be avoided.



- 9 Touch **“OK”**.

- When registration of an area to avoid is completed, the “Area to Avoid” screen will be displayed.

INFORMATION

- If a destination is input in the area to avoid or the route calculation cannot be made without running through the area to avoid, a route passing through the area to avoid may be shown.
- Up to 10 locations can be registered as points/areas to avoid.

EDITING AREA TO AVOID

The name, location and/or area size of a registered area can be edited.

- Press the **“SETUP”** button.
- Touch **“Navigation”** on the “Setup” screen.
- Touch **“Areas to Avoid”** on the “Navigation Settings” screen.
- Touch **“Edit”**.



- 5 Touch the area to be avoided.



- 6** Touch **"Edit"** next to the item to be edited.

Area to Avoid

Name:

Show Name on Map: ☒ On ☐ Off

Location: E E CAPITOL ST SE SE, WASH

Lat.: N38°53'23" Long.: W76°57'55"

Size: 0.25miX0.25mi

Active: ☒ On ☐ Off

No.	Function	Page
1	Touch to edit the name of the area to avoid. The name can be displayed on the map.	114
2	Touch to edit area location.	115
3	Touch to edit area size.	115

“Show Name on Map”: The name of an area to be avoided can be set to be displayed on the map by touching **“On”** or **“Off”**. (See page 114.)

“Active”: The area to avoid feature can be set to “On” or “Off”.

- ## 7 Touch “OK”.

■ TO CHANGE “Name”

- ## 1 Touch “Edit”.

Area to Avoid

Name: Edit

Show Name on Map: On Off

Location: E E CAPITOL ST SE SE, WASH... Edit
Lat.: N38°53'23" Long.: W76°57'55"

Size: 0.25miX0.25mi Edit

Active: On Off OK

- 2** Enter the name using the alphanumeric keys.

- Up to 70 characters can be entered.

- ### 3 Touch “OK”.

- The previous screen will be displayed.

■ DISPLAYING NAMES OF AREAS TO BE AVOIDED

- 1 Touch **"On"**, next to "Show Name on Map", to display the name of an area to be avoided on the map. Touch **"Off"** not to display it.

Area to Avoid

Name:

Edit

Show Name on Map:

On

Off

Location: E E CAPITOL ST SE SE, WASHING...

Edit

Lat.: N38°53'23" Long.: W76°57'55"

Size: 0.25miX0.25mi

Edit

Active:


On


Off

OK

■ TO CHANGE "Location"

- 1 Touch "Edit".

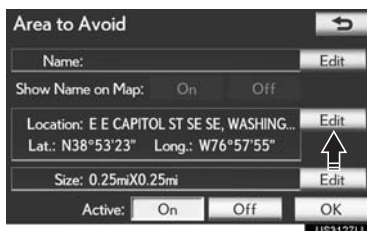

- 2 Touch one of the 8 directional screen buttons to move the cursor  to the desired point on the map.






- 3 Touch "OK".

- The previous screen will be displayed.

■ TO CHANGE "Size"

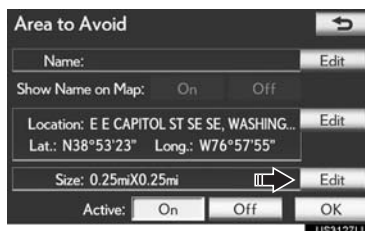- 1 Touch "Edit".



- 2 Touch either  or  to change the size of the area to be avoided.




- 3 Touch "OK".


- The previous screen will be displayed.

DELETING AREAS TO AVOID

- 1 Press the “SETUP” button.
- 2 Touch “Navigation” on the “Setup” screen.
- 3 Touch “Areas to Avoid” on the “Navigation Settings” screen.
- 4 Touch “Delete”.

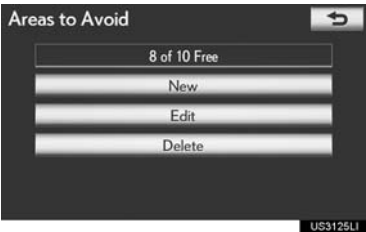

- 5 Touch the area to be deleted.

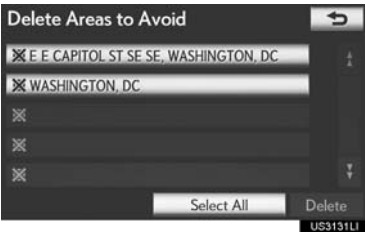


Screen button	Function
“Select All”	Touch to select all registered areas to avoid.
“Unselect All”	Touch to cancel the “Select All” function.

- 6 Touch “Delete”.
- 7 Touch “Yes” to delete the area(s) and touch “No” to cancel the deletion.


DELETING PREVIOUS DESTINATIONS

Previous destinations can be deleted.

- 1 Press the “SETUP” button.
- 2 Touch “Navigation” on the “Setup” screen.
- 3 Touch “Delete Previous Dest.”.

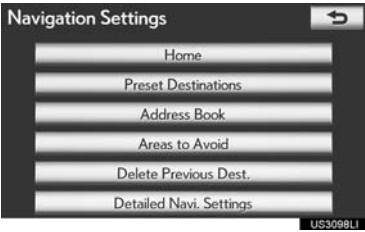

- 4 Touch the previous destination to be deleted.

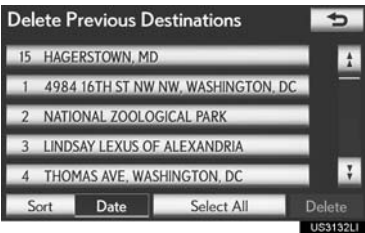

Screen button	Function
“Select All”	Touch to select all previous destinations.
“Unselect All”	Touch to cancel the “Select All” function.

- 5 Touch “Delete”.
- 6 Touch “Yes” to delete the destination(s) and touch “No” to cancel the deletion.